

These instructions are compatible with Lexmark

P315, P915, P4350, P6200, P6250

X2350, X2510, X2530, X2550, X2600, X2650, X3330, X3350, X3500, X3530, X3550, X4300, X4500, X4530, X4550, X5070, X5075, X5200, X5250, X5260, X5270, X5410, X5450, X5470, X5490, X5495, X7170, X7350, X8350

Z800, Z810, Z815, Z816, Z818, Z845, Z1300, Z1310, Z1320, Z1410, Z1420, Z2300, Z2310, Z2320 **printers**

Note: For Lexmark cartridges 15, 24 and 29; they are not refillable, you need to replace them with 15A, 24A and 29A or 35.

Refill Instructions

1. Read the instructions carefully.
2. Put some newspaper in case of any mess.
3. Remove the label on the top of the cartridge to see the filling holes.
4. Fill the syringe with the required ink.
5. Start injecting the ink into the cartridge slowly through the filling hole while sealing the other two holes.

Note: You may feel a slight resistance due to the sponge existing in the cartridge

6. The cartridge is full when the ink starts to overflow, stop injecting before that time so it doesn't mix with other colors.
7. Repeat the previous steps with the other colors.
8. Replace the label back to block the filling holes or seal them with an adhesive tape.
9. Return the extra ink to the bottle.

Note: You can wash the syringe and dry it for future uses

10. Leave the cartridge for one night standing on a non-absorbent surface to make sure it doesn't leak and to give the ink the time to saturate the sponge.
11. Install the cartridge to the printer and run a cleaning cycle.

Note:

- For best results, once the cartridge is empty refill it immediately before the remains of the ink dries.
- If you didn't find the filling holes use the thumb drill to make them on the top of the cartridge.

Colour Cartridge

Please always pre check that the hole colours match the diagram. You can use the needle end to put into each hole then remove and wipe on a tissue to see the colours.

