

**Canon PG-540 / PG-740
CL-541/ CL-741 Cartridges**

Black and colour cartridges refill Instructions

1. Read the instructions carefully.
2. Put some newspaper in case of any mess.
3. Remove the label on the top of the cartridge to see the filling holes.
4. For black cartridge; use the thumb drill to enlarge the filling hole in the middle of the cartridge. For color cartridge, also enlarge the three filling holes.
5. Fill the syringe with the required ink.
6. Start injecting the ink into the cartridge slowly.

Note: You may feel a slight resistance due to the sponge existing in the cartridge

7. The cartridge is full when the ink starts to overflow, stop injecting at this time.
8. Repeat the previous steps with the different color filling holes, ensuring you clean the syringe and needle for each change of colour. You can use water to suck through the needle into the syringe, then push syringe plunger to remove water. Do this 3-4 times to ensure all colours are clear from the needle and syringe.
9. Replace the label back and seal it with an adhesive tape.
10. Return the extra ink to the bottle.


Note: You can wash the syringe and dry it for future uses

11. Leave the cartridge for one night standing on a non-absorbent surface to make sure it doesn't leak and to give the ink the time to saturate the sponge.
12. Install the cartridge to the printer and run a cleaning cycle.

Note: For best results, once the cartridge is empty refill it immediately before the remains of the ink dries.

Note: You will need to disable the ink level monitor on your printer by pressing the paper feed / reset button  for 5 seconds. This will now deactivate any ink levels on your printer.

Poor printing will be due to dried ink on the print head, please use the cleaning fluid on the print head. See instructions.

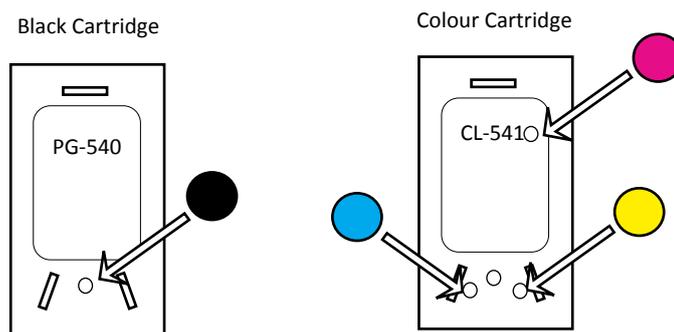

Drill Hole Locations